
BATTERY REPLACEMENT INSTRUCTIONS FOR CABLE MODEMS AND ONTS

ONTs

How do I know if the battery on my ONT needs to be replaced and what should be done to replace it?

A Green indicator light on the battery (as shown in diagram) indicates that the battery is good. A red flashing light on the battery indicates that the battery is not connected or is bad and needs to be replaced.

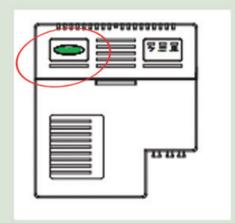

NOTE: ONTs must be replaced by an ATMC Technician.

Please call 754-4317 if you wish to schedule a time to have your battery replaced.