

# RT-DTA+TV

## DTA+TV Remote Control



### Programming And Operating Instructions

To have a clearer idea of the features and capabilities of your remote control, take a moment to read these instructions. Save for future reference.

© 2009, Contec Holdings, LLC, Rev.02/09

#### RT-DTA + TV DTA+TV Remote Control

### 1. Introduction

Your remote control is simple to program, easy to use, and can operate two (2) electronic devices, which include :

**CABLE TV** Motorola Digital Transport Adapter Televisions

Before you can use your remote control, it must be programmed (set-up) to operate your TV.

### 2. Before Getting Started

Some of the special features on your remote control are as follows :

#### Point and Press® Programming

Lets you program your TV without codes. For more information, see Section 4.

#### Time Out

Shuts remote off if any button is pressed and held for 30-seconds. This extends battery life in the event the remote becomes lodged under or between heavy objects.

### 3. Installing / Replacing Batteries

Install two (2) new "AAA" batteries as indicated by the diagram in the battery compartment.

When the batteries become low and need to be replaced, the LED will not illuminate normally or at all during use.

When this happens, replace the existing batteries with two (2) new "AAA" batteries to restore normal operation to the remote control.

2

#### RT-DTA + TV DTA+TV Remote Control

### 4. Programming Your TV

Code-Entry Programming...

1. Turn on TV.
2. Press [OK], then [MUTE] together until the LED illuminates.
3. Locate the 3-digit code for your brand in the TV Setup Code list and enter it on the keypad of the remote control. Entry of the correct code will cause your TV to turn off.

If multiple codes are listed for your brand, you may have to enter several different codes until your TV turns off.

4. As soon as you have entered a 3-digit code that turns your TV off, press [MUTE].

a. If the TV turns back on, press [OK] to lock in the code. The LED will blink and go out.

Or

b. If the TV does not turn back on, enter a different 3-digit setup code until your TV turns back on. Then press [OK] to lock in the code. The LED will blink and go out.

Point and Press® Programming...

1. Turn on TV.
2. Press [OK], then [MUTE] together until the LED illuminates.
3. Press and hold the [CH ▲] button until one device turns off. While you are pressing the [CH ▲] button, the LED will blink. As soon as one device turns off, release the [CH ▲] button.
4. Press [MUTE]. If the device that turned off...

3

#### RT-DTA + TV DTA+TV Remote Control

- Turns back on, press [OK] to lock in this code. The LED will blink and go out.

Or

- Does not turn back on, press [CH ▼] one step at a time until that device turns back on. Each time you press the [CH ▼] button, the LED will blink. Once you have found a code that turns the device on / off, press [OK] to lock in this code. The LED will blink and go out.

### 5. Programming Volume Control

To program volume control to Motorola Digital Transport Adapter...

1. Press [DTA], then [OK] together until the LED illuminates.
2. Press [VOL ▲], then [DTA] for Cable volume.
3. The LED will blink and go out.

To program volume control to TV...

1. Press [DTA], then [OK] together until the LED illuminates.
2. Press [VOL ▲], then [TV] for TV volume.
3. The LED will blink and go out.

### 6. Resetting Your Remote Control

To reset your remote to its factory default setting, follow these steps:

1. Press [DTA], then [OK] together until the LED illuminates.
2. Press [MENU], then [MENU] again. The LED will blink and go out.

4

#### RT-DTA + TV DTA+TV Remote Control

### TV Set-up Codes

BRAND	CODE				
<b>Admiral</b>	026	054	211	213	
<b>Advent</b>	072	094	425	447	463
<b>Adventura</b>	047				
<b>Aiwa</b>	214	471			
<b>Akai</b>	053	462	473	522	524
	547	572	586		
<b>Amark</b>	023	215			
<b>Amstrad</b>	157				
<b>Anam</b>	217	218	219	220	221
	222	223			
<b>AOC</b>	053	573			
<b>APEX</b>	030	038	427		
<b>Astar</b>	462				
<b>Audiovox</b>	191	220	465		
<b>Belcor</b>	073				
<b>Bell &amp; Howell</b>	211	213			
<b>Ben Q</b>	454				
<b>Broksonic</b>	165	167			
<b>Brokwood</b>	073				
<b>Candle</b>	068	091			
<b>Centurion</b>	095	107	108		
<b>Citizen</b>	068	091	211	213	233
<b>Coby</b>	558				
<b>Concerto</b>	073	095			
<b>Contec</b>	147				
<b>Coronado</b>	023				
<b>Craig</b>	223				
<b>Crosley</b>	598				
<b>Crown</b>	023				
<b>Curtis Mathes</b>	016	054	107	108	211
	213				
<b>Daewoo</b>	051	068	073	095	158
	159	189	191	194	196
	197	198	200	202	204
	205	206	207	209	

5

#### RT-DTA + TV DTA+TV Remote Control

<b>Daytron</b>	073	095	107	108	
<b>Dell</b>	072	094			
<b>Diamond Vision</b>	563				
<b>Dumont</b>	073				
<b>Dynex</b>	167	415	424	567	577
<b>Electro Home</b>	073	095			
<b>Elektra</b>	353				
<b>Element</b>	459	587			
<b>Emerson</b>	016	023	053	064	103
	139	158	159	164	165
	166	167	168	169	392
	400	401	402	408	415
	424	507	567	577	590
<b>Envision</b>	073	095			
<b>ESA</b>	454	456	538		
<b>Fisher</b>	355	356			
<b>Fujitsu</b>	460	469	560		
<b>Funai</b>	047	048	157	168	211
<b>Gateway</b>	426				
<b>GE</b>	015	018	042	044	049
	054	055	068	073	090
	092	095	101	102	103
	389	390	396	403	406
	407				
<b>Gibraltar</b>	023	048	053	068	073
	090	095	107	108	233
	360				
<b>Goldstar (LG)</b>	023	053	068	073	090
	107	108	233	360	361
	104				
<b>Gradiente</b>	233				
<b>Grundig</b>	443				
<b>Go Video</b>	053	073	095	108	427
<b>Haier</b>	519	587	573	596	
<b>Hall Mark</b>	073	095			
<b>Hitachi</b>	023	068	095	096	097
	098	099	100		
<b>HP</b>	072				
<b>Hyundai</b>	453				
<b>ILO</b>	524	586			

6

#### RT-DTA + TV DTA+TV Remote Control

<b>Initial</b>	470				
<b>Inkel</b>	364				
<b>Insignia</b>	167	415	424	450	456
	461	462	523	524	567
	577	586			
<b>JC Penney</b>	039	053	068	073	092
	095	102	355		
<b>Jensen</b>	062	461			
<b>JVC</b>	104	105	106	396	397
	410	589			
<b>Kawasho</b>	073	095			
<b>KMC</b>	023				
<b>Konka</b>	445	589			
<b>Kosch</b>	462				
<b>KTV</b>	023	053	233	366	
<b>Kurazai</b>	211	213			
<b>Legend</b>	169				
<b>LG (Goldstar)</b>	023	053	068	073	090
	107	108	233	360	361
	424	567	577	587	
<b>Lodgenet</b>	211	213			
<b>Logik</b>	211	213			
<b>Luxman</b>	068	073	095		
<b>LXI</b>	024	026	157	355	388
<b>MAG</b>	459				
<b>Magnavox (Philips)</b>	023	068	071	072	073
	089	090	091	092	093
	094	134	385	387	397
	404	419	463	470	472
	549	594	595		
<b>Majestic</b>	211	213			
<b>Marantz</b>	053	107	108	109	
<b>Matsui</b>	582	583	585		
<b>Maxent</b>	426	533	534		
<b>McIntosh</b>	555				
<b>Megatron</b>	215				
<b>Memorex</b>	090	211	213	355	388
	405	423	459		
<b>MGA / Mitsubishi</b>	053	068	073	090	095
	107	108	109	110	216

7

#### RT-DTA + TV DTA+TV Remote Control

	384	394	395	398	399
	417				
<b>Mintek</b>	470				
<b>Montgomery Ward</b>	022	023	026	053	071
	072	108	211	213	
<b>NEC</b>	028	068	090	108	200
	464				
<b>Net TV</b>	426				
<b>Norcent</b>	455	472			
<b>Olevia</b>	073	108	519	541	587
<b>Orion</b>	019	159	160	161	162
	163	382	423	424	558
<b>Panasonic</b>	042	043	044	045	046
	419	429			
<b>Philco</b>	023	053	068	071	072
	091	463			
<b>Magnavox (Philips)</b>	023	068	071	072	073
	089	090	091	092	093
	094	134	385	387	397
	404	419	463	470	472
	549	594	595		
<b>Pilot</b>	073	094	233		
<b>Pioneer</b>	019	111	144	383	551
<b>Planar</b>	474				
<b>Polaroid</b>	384	394	459		
<b>Portland</b>	023	068			
<b>Prima</b>	072				
<b>ProScan</b>	055	070			
<b>Proton</b>	090	371	372		
<b>Protron</b>	457	467			
<b>Proview</b>	459				
<b>Pulsar</b>	073				
<b>Quasar</b>	044				
<b>Radio Shack</b>	073				
<b>Realistic</b>	022	166	168		
<b>RCA</b>	042	052	053	054	055
	068	069	070	416	
<b>Runco</b>	525				
<b>Sampo</b>	090	108			
<b>Samsung</b>	015	016	017	023	031

8

#### RT-DTA + TV DTA+TV Remote Control

	090	107	108	134	147
	151	153	386	411	508
	577				
<b>Sansui</b>	423	424			
<b>Sanyo</b>	353	355	356	376	377
<b>Sceptre</b>	468				
<b>Scott</b>	090	108	168	561	
<b>Sears</b>	023	030	031	038	039
	068	353	355	356	
<b>Sharp</b>	016	022	023	024	