 


## Parental Controls

Choose what you want your kids to watch. Parental Controls allow you to block by Rating, Channel and Time. Press MENU twice on your ATMC remote control to access Parental Controls.


### lock by channel or rating

From the Parental Control menu, select Locked Channels or Ratings, then choose channels or ratings that you want to lock. Press the up or down arrows to highlight the channel or rating, then press OK to lock the channel/rating.

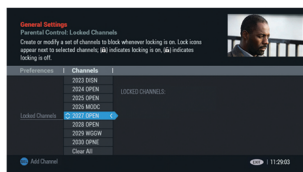


### hide adult titles

This feature allows you to hide adult titles on the guide. Select Hide Adult Titles from the Parental Control menu, highlight Always or Never and press OK to enable. Once enabled you must change locking status to ON. The guide will show 'Title Blocked' when feature is enabled.

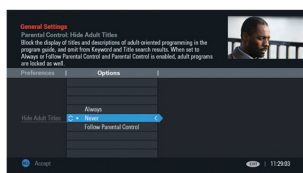


### change PIN

The Change PIN preference lets you change your Parental Control PIN. From Parental Control, select Change PIN. Follow the on-screen prompts to enter a new PIN. You must establish a PIN code on each of your cable boxes.

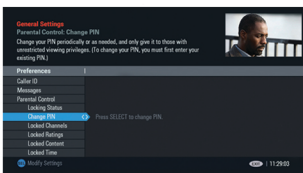


### to change locking status

Highlight Locking Status under the Parental Control menu, and then press OK. You will be prompted to enter a four-digit PIN when you make a selection.

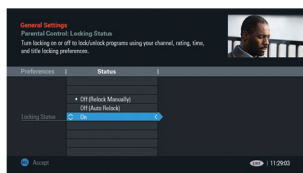

## Remote Control

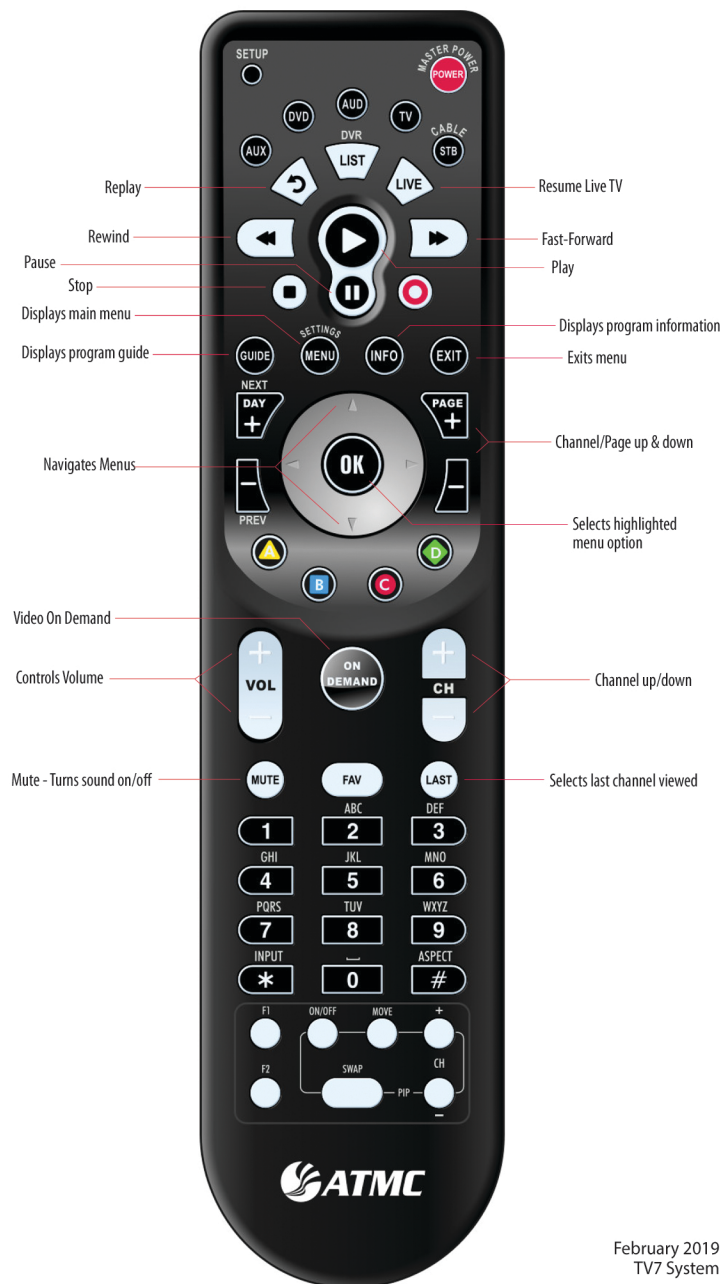

February 2019  
TV7 System

Note: The buttons and features shown in the remote control illustration may differ from your remote control. The remote control shown is for sample purposes only. Remote control buttons may need to be programmed before using.

# HD Digital Cable Box User Guide



Call 910.754.4311 for details.

TV7

910.754.4311  
www.atmc.com  
**ATMC**





## Convenience, Variety & Control

Search using the easy-to-use guide, get detailed information on a particular show, and filter or sort by Theme or Channel.


## changing channels

- Use the channel up and down buttons to channel surf.
- Select a specific channel by using the number buttons to enter channel number.
- Select the previous channel by pressing the LAST button.




## guide browsing

The Guide/Time Grid is neatly organized by time and channel to help you easily find program information. Get started by pressing the Guide button on your remote to display 2.5 hours of program listings. Arrow up and down to navigate.

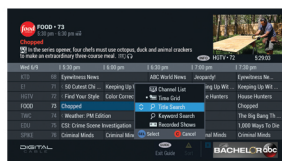


## filter, sort & search

Press the Guide button twice to filter or sort programs by Theme or Channel, to search by Title or Keyword, and to launch the Discovery Dashboard. Arrow up and down to navigate. Search all or focus your search on only TV Listings, only On Demand programs, or both.

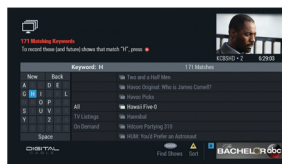

## program info

Press the Info button once to get information about the program you are currently watching or to view program info from the Guide. For a brief program description, press Info twice. Use page up and page down to view the entire description.

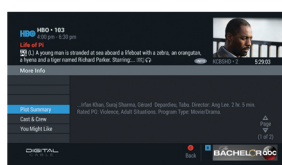


## Personalize Your TV Experience!

Set Favorite and Skipped Channels, Timers, and much more using 'My Preferences.' Press the GUIDE button to get started.


## my preferences

Press the Menu button twice for General Settings. Select My Preferences to set your Favorite Channels, Skipped Channels, and other preferences, including Color Scheme. You may also block purchases in the General Settings menu.

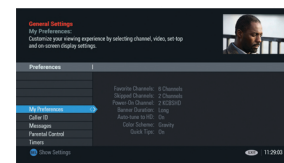


## favorite channels

Press the Menu button twice and choose My Preferences, then Favorite Channels. Select the channels you want to set as your favorites by pressing the OK button on each. Once Favorite Channels are set, you can choose to browse only those channels by pressing the FAV button on your remote.

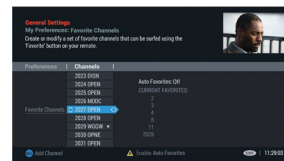


## manage timers

You can set timers to power the TV on or off; remind you of upcoming programs; and control sleep mode. To modify timers, access the General Settings menu by pressing Menu twice. Select Timers and press OK.

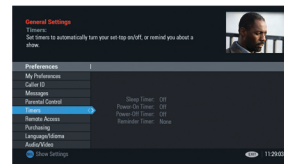

## quick tips


Quick Tips displays helpful tips while browsing or searching for shows. Press the Menu button twice for General Settings, highlight Quick Tips and press OK. Arrow up or down for On or Off. Quick Tips will be displayed periodically or manually display by selecting View Now.

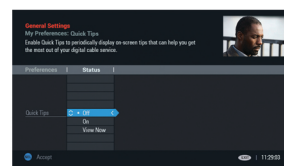

Video On Demand offers instant access to free shows, new release movies, local programming and much more.


## vod main menu

Access the main On Demand menu by pressing the On Demand button on your remote twice. Choose from Free, Movies, Events, and Premiums On Demand. To navigate, use the arrow and OK buttons. See below for more details about each category.

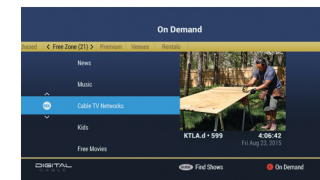

## vod discovery dashboard

The Discovery Dashboard is a quick way to find shows and movies that are trending. Categories include Primetime TV, Cable Networks, Kids and Premium. Press the On Demand button once to display the Discovery Dashboard.

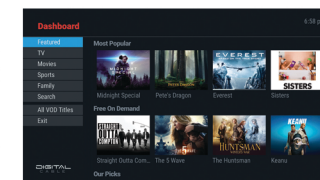

## what's available

### FREE Programs On Demand

Get thousands of hours of FREE programming from some of your favorite networks like ABC, NBC, FOX, Lifetime, Nickelodeon, Universal Kids, Music Choice and many more. Availability of networks is determined upon the cable TV package to which you subscribe.

- Select Free On Demand from the Main Menu for access.

### New Release Movies

Choose from a huge library of new release movies, including comedies, dramas, family favorites and events - most in HD and many available up to 28 days before Netflix® & Redbox®. Use your remote control to order, as well as pause, rewind and fast-forward. Movie rental fees vary and are announced at time of ordering.

- Select the Movies On Demand category to see what's showing.

### Premiums On Demand

Watch some of your favorite movies and original series from HBO, Cinemax, Starz & Showtime - each available at no extra cost as part of your monthly premium channel service.

- Select the Premiums On Demand category to check availability.

