





How do I add extenders to my Plume Home network?

1. In the Plume Home app, open the Network page

The Network page can be accessed by tapping on the Wi-Fi symbol on the menu bar at the bottom of the screen.

2. Scroll to the Extenders section

With the Connectivity tab selected, scroll down until you find the Extenders section. Tap on the '+' icon beside it.

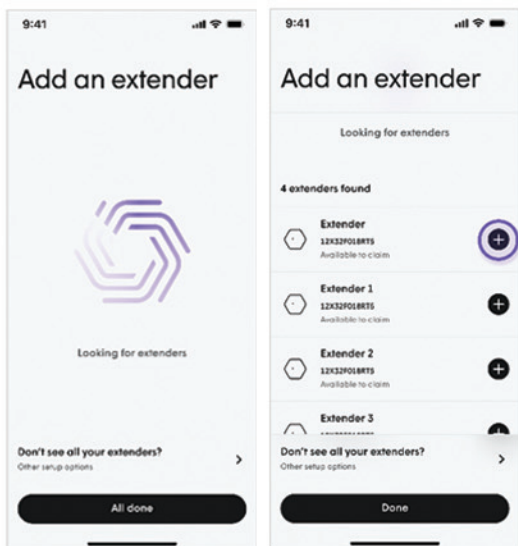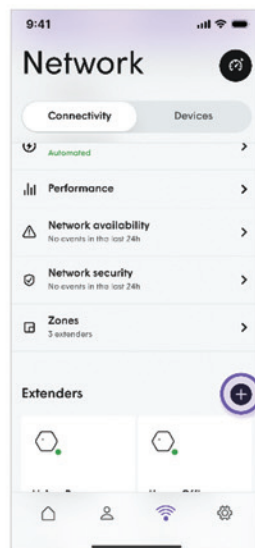

3. Plug the SuperPod into Power

The LED on your SuperPod should turn on when plugged in and, after a moment, pulse slowly. If the LED does not turn on, confirm the outlet has power.

4. Wait for the Extender to be found


Stay close until the app confirms the extender has been found. If adding more than one extender, repeat the previous step as needed. Once all extenders have been found, claim them to your network using the '+' icon next to them.

5. Rename your Extenders (optional)

You can use the pencil icons to rename each extender. Enter the name of your choice and tap 'Save'.

6. Setup complete!

Once all extenders have been claimed and renamed, tap 'All Done' to finish setup.

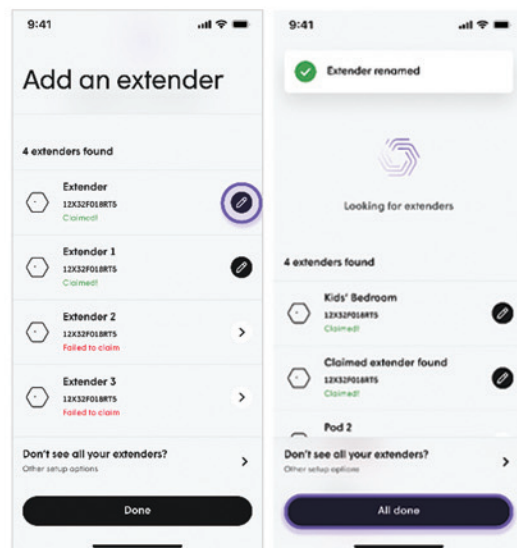

833-663-1241

focusbroadband.com/premiumwifi